
# ospa.hr

# **User's manual**


ΕN

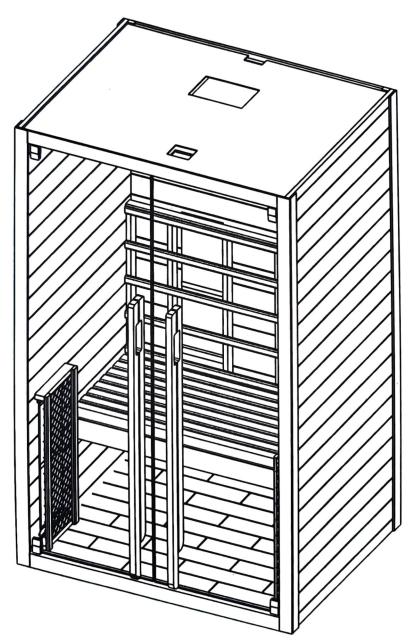

Sauna Room

IR120-B



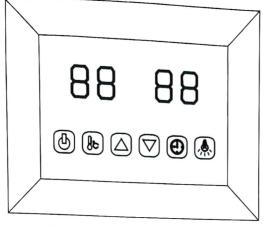

ATING INSTRUCTIONS



- $(\Phi)$  ON/OFF
- Color light
- ★ Temperature setting
- (**①**) Time setting
- $\triangle$  Time Temperature +
- ∇ Time Temperature Te

Connect the power unit to wall outlet, the LED indicator will start to blink on the display. Now it is possible to switch on the infrared heaters, the light and the music function.

#### 1)Startup

Press (b) to switch on the display and heaters start to work, the length of time is automatically set to 99 minutes and the air temperature inside the cabin will be presented. Press (6) again could switch off the heaters.

### 2)Temperature settings

The left display refers to the air temperature. Press $\textcircled{\color{l}{k}}$  , you can set the desired temperature from 35  $^\circ$ C to 60  $^\circ$ C by pressing the △/ √keys,Interval=1°C; The setting number blinks 10 seconds then automatically presents the air temperature; When at this temperature, the heaters will stop working automatically; When it fall 4°C below this temperature, the cabin will start up automatically.

Please note: The maximum air temperature reachable in the cabin may be lower than the desired temperature. This is dependent on the temperature outside the cabin. Default temperature=40  $^{\circ}\mathrm{C}$ 

# 3)Time settings

The right display refers to the length of time. Press (2), you can set the desired time from 5mins to 99mins by pressing the  $\triangle$  / $\nabla$  keys. Interval=1mins; When count down to 00, the heaters will shut off automatically. Default time=99minutes.

# 4)Color light

Short press (A), you can set the desired color (7 color totally) and close the light; Long press (A) to go into an automatically cycling mode, changing 7 colors every 5 seconds.

# 5) Mp3 player

Activate the MP3 player by pressing and holding the "DED" button on the MP3 player. Select the preferred mode with brief repeated presses of the "LM" button on the MP3 player. (USB, MMC CARD, Bluetooth,FM radio)

#### USB/SD or Bluetooth mode:

You can select songs by short pressing the [151] keys and adjust the volume (0-32) by long pressing the 🖼 / 🖼 keys. The 🖼 key for pause.

#### FM radio mode:

Long press [H] to search stations (87.5MHZ-108MHZ) automatically, the system will save all of them; You can select stations by short pressing the [H4] / [FF] keys and adjust the volume (0-32) by long pressing the [14] / [15] keys.